

Preset Panning Sills




Series: Accessories Manufacturing Code: PPN41

Drawing 3/8 Scale – For Custom Size Drawing Contact Graham

Note: Sealant Not Shown On Details. Refer To General Installation Instructions.


Note: Pre-Set Panning Requires The Use Of Equal Leg Sill On Window
Some Pre-Set Panning Require The Use Of Mechanical Corner Keys For Mitered Assembly. Reference Sheet PPN.CK For Representative Corner Detail.

Reading Outlet Pre-Set Panning Mating Sills			
Description	"A" Dim. x "B" Dim.	Extrusion Die #99	Slope =
Reading Outlet	2.980 x 1.458	6965	.417

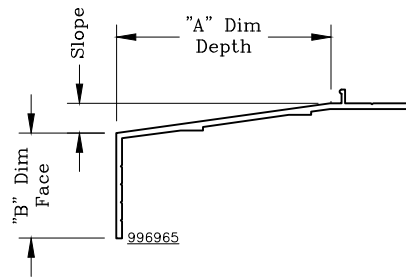

No Current Jamb Panning Associated
Contact Graham For Jamb Panning Options

Miami Psyche Pre-Set Panning Mating Sills			
Description	"A" Dim. x "B" Dim.	Extrusion Die #99	Slope =
Miami Psyche	3.230 x .375	7988	.455

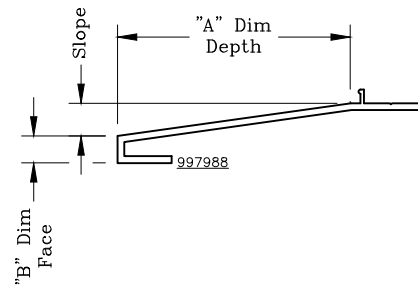

No Current Jamb Panning Associated
Contact Graham For Jamb Panning Options